



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH II
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH
THE QUEEN MOTHER
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO
HIS ROYAL HIGHNESS THE PRINCE OF WALES
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY

X-TYPE

OWNER'S HANDBOOK

Publication Part No. **JJM 10 02 20 551**

Published December 2004 by Technical Communications, **Jaguar Cars Limited**

JAGUAR CARS LIMITED, as manufacturer, is dedicated to the design and production of vehicles which meet the expectations of the world's most discerning purchasers.

This handbook forms part of the owner literature supplied with your vehicle. It is designed to complement the relevant features and systems of the vehicle, and make them easy to understand and operate.

The information contained in this handbook applies to a range of vehicles and not to a specific vehicle. For the specification of a particular vehicle, owners should consult their Jaguar Dealer/Authorised Repairer.

The manufacturer reserves the right to vary its specifications with or without notice, and at such times and in such manner as it thinks fit. Major as well as minor changes may be involved in accordance with the Manufacturer's policy of constant product improvement.

To cover changes, it is sometimes necessary to issue one or more handbook supplements. When reading this handbook, check the owner literature for possible supplements.

For full details of the owner literature originally supplied with the vehicle, owners should consult their Jaguar Dealer/Authorised Repairer.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic, mechanical, photocopying, recording or other means without prior written permission from the Service Division of Jaguar Cars Limited.



This book is printed on paper that originates from sustainable forests, is recyclable, bio-degradable and acid-free. The wood pulp is chlorine-free and the effluent water is purified before being discharged.

Handbook Contents

Quick Overview	
Quick Overview	7
Filling Station Information	18
Owner Information	
General Information	21
Security and Locks	
Ignition Switch	29
Vehicle Security	30
Door Locks	33
Luggage Compartment Locks	38
Alarm Systems	39
Before Driving	
Occupant Protection	41
Child Safety	52
Seats	61
Clock	65
Steering Column	66
Door Windows	67
Mirrors	69
Luggage Compartment	71
On the Road	
Instruments	77
Warning Lights	79
Audible Warnings	84
Message Centre	85
Trip Computer	88
Cruise (Speed) Control	91
Exterior Lighting	93
Interior Lighting	97
Parking Assist	99
Horn	102
Sunroof	103
Wipers and Washers	104
Handbrake	107
Interior Features	108
Engine Starting	111
Transmission	113
Braking System	117
Traction Control	119
Stability Control	120
Driving Information	121
Fuel and Refuelling	126
Climate Control	
Climate Control	131
Manual Climate Control	134
Automatic Climate Control	137
Roadside Emergency	
Inertia Switch	141
Emergency Starting	142
Wheel Changing	144
Vehicle Recovery	149
Bulb Renewal	152
Fuses	157
Fire Extinguisher	165
Maintenance	
General Maintenance	166
Bonnet Release	167
Regular Checks	168
Checking and Top-up	171
Battery	176
Wiper Blades	180
Tyres	181
Vehicle Care	184
Electrical Accessories	187
Specifications	
Engine Data	188
Weights	189
Load Weights	192
Dimensions	193
Wheels and Tyres	194
Fuel Consumption	195

A comprehensive index is located at the back of this handbook.



Quick Overview

Quick Overview

Warning Lights	7
Fascia Controls	8
Centre Console	9
Occupancy Sensing	10
Direction Indicators	10
Overhead Console	11
Seat Adjustment	11
Steering Column Adjustment	12
Door Mirror Adjustment	12
Window Operation	12
Exterior Lights	13
Wipers and Washers	13
Trip Computer Switchpack	14
Climate Control	15
Audio System	16
Steering Wheel Audio Controls	17
Rear Seat Back fold down	17


Filling Station Information

Fuel Type	18
Fuel Filling	18
Bonnet Release	19
Underbonnet Top-up	19
Tyre Pressures	20



Quick Overview

Warning Lights

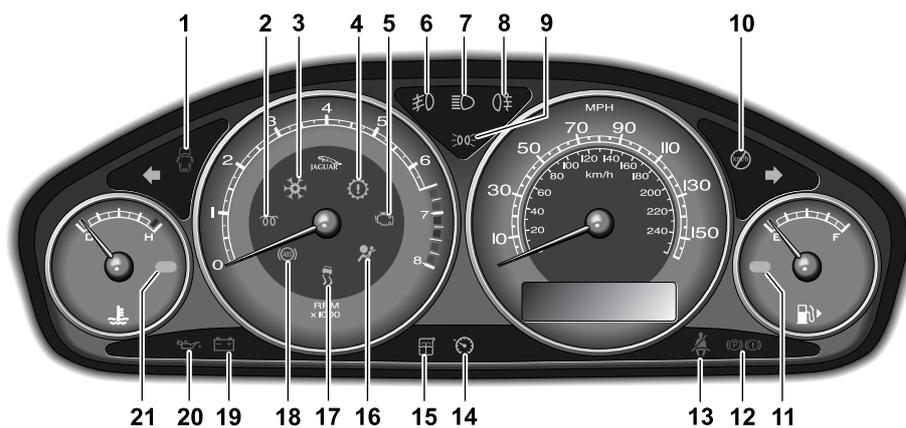


JOL3253

1. Door ajar.
 2. Glow plugs (diesel only).
 3. Low outside temperature.
 4. Powertrain malfunction.
 5. Engine malfunction.
 6. Front fog lights.
 7. Main beam.
 8. Rear fog lights.
 9. Side (parking) lights.
 10. Overspeed warning (Middle East countries only).
 11. Low fuel level.
 12. Handbrake on/brake fluid low.
 13. Driver's seat belt.
 14. Cruise control active.
 15. Low washer fluid level.
 16. Airbag.
 17. Traction control/dynamic stability control.
 18. Anti-lock braking system (ABS).
 19. Battery charge indicator.
 20. Low oil pressure.
 21. High engine temperature.
- For detailed information about instruments and warning lights, refer to page 77 of this handbook.

Quick Overview

Fascia Controls

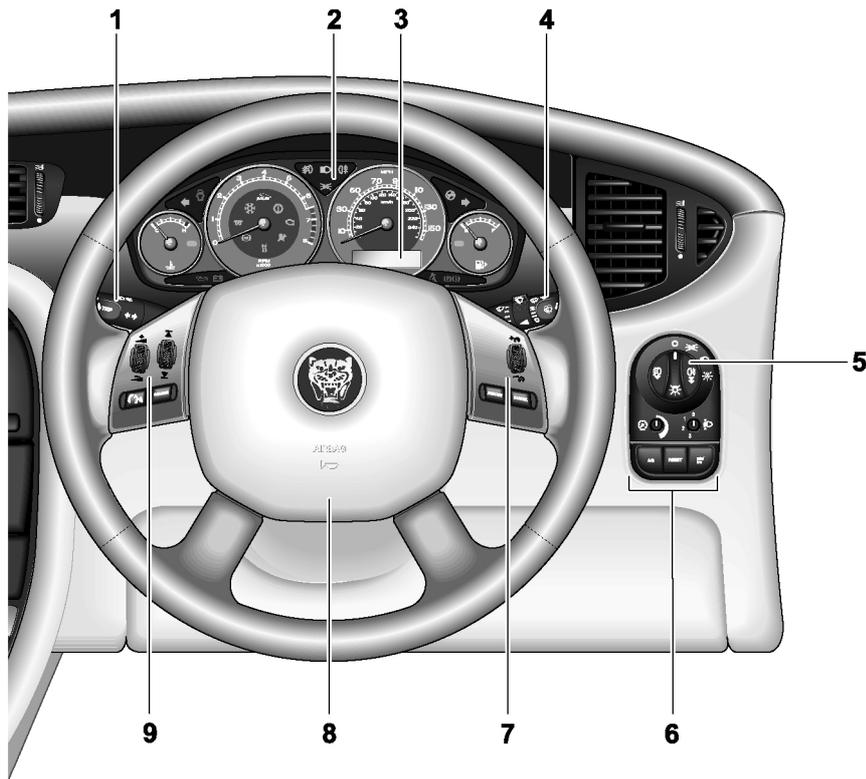


JOL3616

- | | |
|---|--|
| <ol style="list-style-type: none"> 1. Direction indicator switch (96). 2. Instrument cluster (77). 3. Message centre (85). 4. Wiper/washer switches (105). 5. Exterior light switch (93). 6. Trip computer switches (88). | <ol style="list-style-type: none"> 7. Cruise control switches (91). 8. Driver's airbag/horn (102). 9. Audio switches (see audio systems handbook). <p>Refer to this handbook (page numbers shown in brackets) for further relevant information.</p> |
|---|--|

Quick Overview

Centre Console

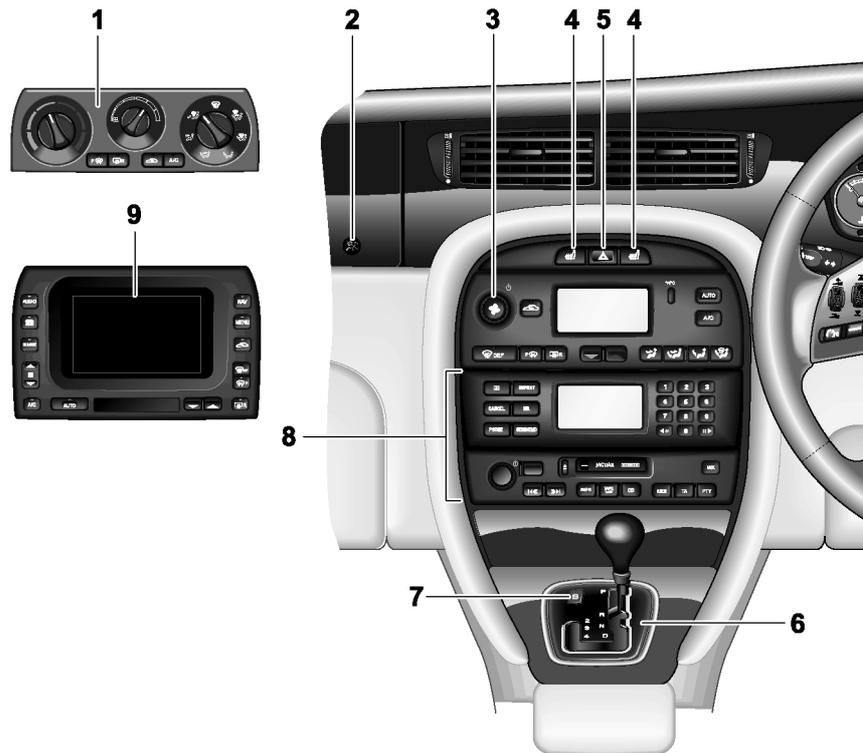


JOL3182

- | | |
|---|--|
| <ul style="list-style-type: none"> 1. Manual climate control (134). 2. Airbag off indicator light (50). 3. Automatic climate control panel (137). 4. Front seat heater switches (64). 5. Hazard warning switch (96). | <ul style="list-style-type: none"> 6. Gear selector (113). 7. Sport mode switch (115). 8. Audio control panel (see audio systems handbook). 9. Touch-screen (see touch-screen handbook). |
|---|--|

Refer to this handbook (page numbers shown in brackets) for further relevant information.

Quick Overview

Occupancy Sensing

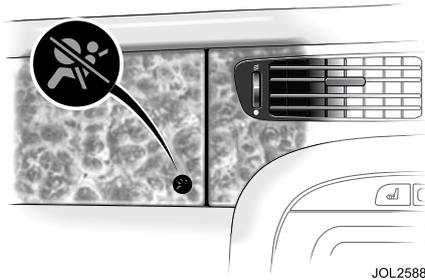

JOL2588

The front passenger seat is equipped with a sensor that determines if the seat is occupied by measuring the weight on the cushion. This information is used to change the passenger airbag deployment status.

An indicator light is located on the passenger fascia. This illuminates when the passenger airbag is **deactivated**.


The occupancy sensor operates as follows:

Seat occupancy status	Passenger airbag status	Indicator light active
Completely empty	Deactivated	No*
Low weight occupant/object	Deactivated	Yes
Heavy occupant/object	Activated	No

*It is possible to receive an intermittent indicator light with an empty seat condition. This is part of the system's adaptive behaviour, and does not affect the status of the passenger airbag. However, if the indicator light becomes permanently illuminated when the seat is definitely empty, then contact your nearest Jaguar Dealer/Authorised Repairer immediately.

Refer to page 50 for more information.

Direction Indicators

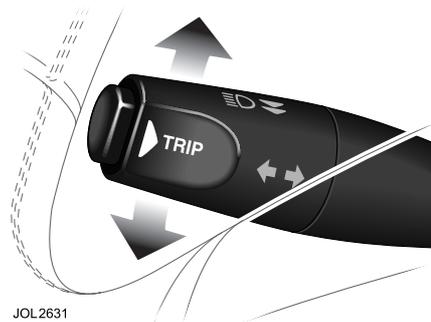


JOL2631

For information on direction indicators, see page 96.


Quick Overview

Overhead Console

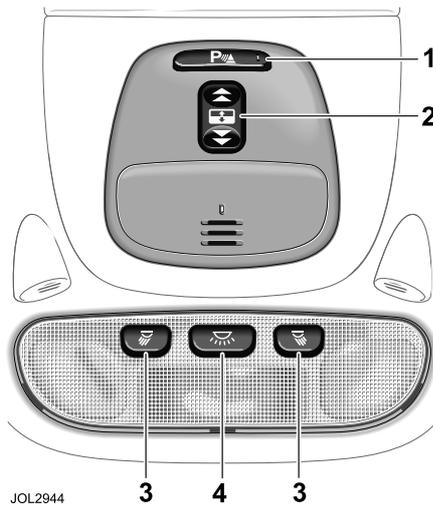

1. Park aid (see page 99).
2. Sunroof (see page 103).
3. Reading/map lights (see page 97).
4. Interior roof light (see page 97).

Seat Adjustment

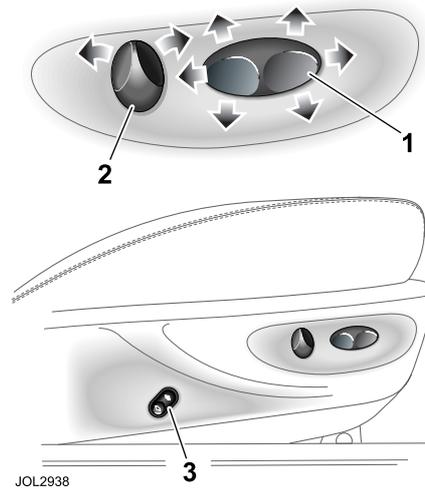



For 10-way adjustable seats:

1. Adjusts the seat base.
2. Adjusts the seat back.
3. Adjusts the lumbar support.

For more information on front and rear seat operation and for details of how to operate seats with different features, see page 61.

Quick Overview


Steering Column Adjustment

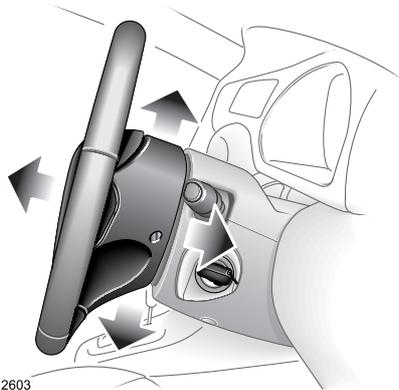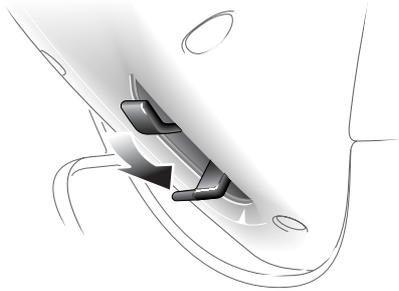

JOL2603

For full details on how to adjust the steering column, see page 66.

Door Mirror Adjustment

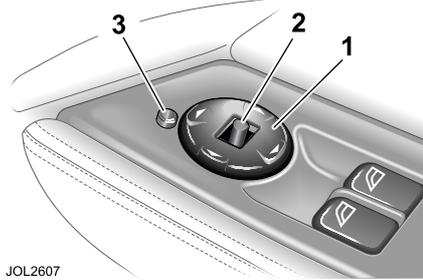


JOL2607

1. Adjusts mirrors.
2. Selects left or right-hand door mirror.
3. Folds door mirrors flat.

For more information on door mirrors, see page 69.

Window Operation

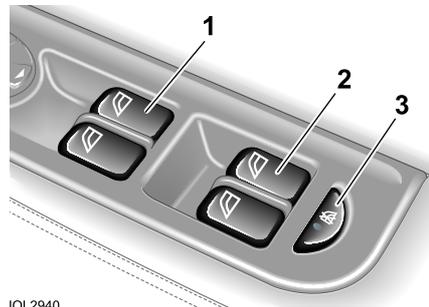


JOL2940

1. Opens/closes front windows.
2. Opens/closes rear windows.
3. Isolates operation of rear windows.

For more information on window operation, see page 67.

Quick Overview

Exterior Lights

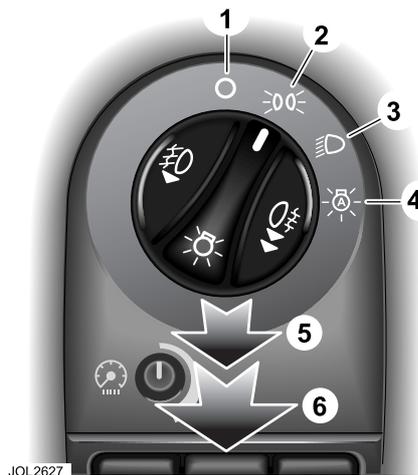

JOL2627


1. Exterior lights OFF.
2. Side (parking) lights.
3. Headlights.
4. Auto lights.
5. Front fog lights.
6. Rear fog lights.

For more information about exterior lighting, see page 93.

Wipers and Washers

The stalk functions are as follows:

1. Wipers OFF.
2. Intermittent wipe.
3. Normal wiper operation.
4. High speed wiper operation.
5. Intermittent delay collar - rotate to vary the wipe delay and AUTO wipe.

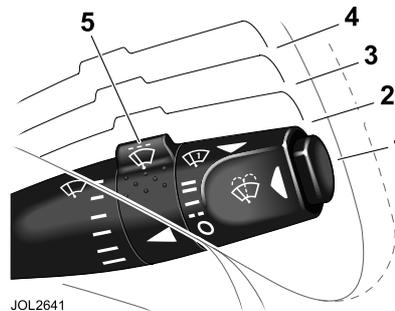

JOL2641

Caution:

- Ensure that **AUTO** is not selected when entering a car wash or damage to the wiper blades/arms can occur.
- During frosty conditions, ensure that **AUTO** is not selected before operating the ignition switch as damage to the wiper blades can occur when the windscreen is frozen.

Flick wipe

Saloon - Pull stalk towards the steering wheel.

Estate - Push stalk down from OFF (1) position.


Note: When starting a journey with a wet windscreen, the rain sensing wipers will not operate immediately the ignition is switched on. Therefore, a flick wipe should be used to clear the windscreen of any moisture.

Wash/wipe

Push the button on the end of the column switch.

Quick Overview

Rear wash/wipe (Estate only)

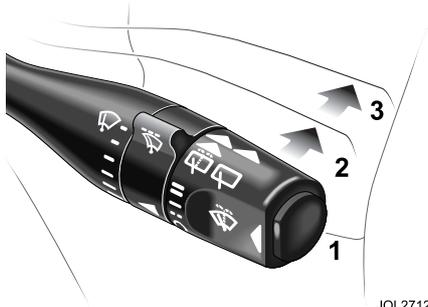

JOL2712

Estate models are fitted with a rear screen wash/wipe. This is operated by the right-hand column stalk and only operates with the ignition in position 'II'.

The stalk functions are as follows:

1. Rear wiper off and parked.
2. Intermittent wipe.
3. Continuous wash and wipe.

If reverse gear is selected, the rear wiper will operate automatically if the windscreen wipers are switched on.

Caution: In cold conditions, when frost may be present on the rear screen, it is advisable to switch off the windscreen wipers before selecting reverse gear. The automatic operation of the rear wiper may cause damage to the blade if the screen is heavily frosted.

For full details on how to operate the wipers/washers, see page 104.

Trip Computer Switchpack



JOL2623

ML/km

Pressing the 'ML/km' switch alternately displays data in metric or imperial units.

A/B

Selects either A or B trip memory. Select the required data using the column stalk TRIP button and then pressing A/B will show the A or B information for that data.

RESET

RESET resets the selected trip to zero.

Resetting the trip computer

At the start of the journey (or series of journeys) to be recorded, reset the computer memory to zero as follows:

1. Press the TRIP button on the end of the left column stalk switch to select a trip function. The computer will display either TRIP A: or TRIP B: data.
2. Press the A/B switch to select the trip (A or B) to be reset.
3. Press the RESET switch and hold for 3 seconds.

For more information, refer to page 89.

Quick Overview

Climate Control



JOL3276

1. Push for system ON/OFF, rotate for manual blower speed.
2. Automatic operation.
3. Air conditioning.
4. Heated rear screen.
5. Defrost.

Moisture removed from the air by the air conditioning unit is discharged onto the road underneath the vehicle. After stopping, puddles of water may form underneath the vehicle: this is normal.

For full details of climate control, see page 131.

For optimum comfort and system operation:

- Optimum temperature control and comfort is achieved by selecting **AUTO**.
- Operate with **A/C** on throughout the year to reduce the risk of misting.
- **A/C** operates automatically in **DEFROST** and partial screen modes to maximise screen clearance. **A/C** cannot be switched off in **DEFROST**.
- Recirc is automatically cancelled in **DEFROST** and in partial screen modes as it contributes to misting. Recirc cannot be selected in **DEFROST**.

Quick Overview

Audio System




JOL3274

1. ON/OFF switch and volume control.
2. Seek AM/FM station, seek tape or cue/rewind CD.
3. AM/FM radio waveband select.
4. Select cassette tape play when in other audio mode. Change tape side when a tape is playing.
5. Select CD changer.
6. Pre-set buttons and phone key pad.
7. Phone mode.
8. Cassette tape eject.
9. CD eject.
10. Select CD changer.
11. Select CD play when in other audio mode.

For all other options and functions, see the audio systems handbook.

Quick Overview

Steering Wheel Audio Controls

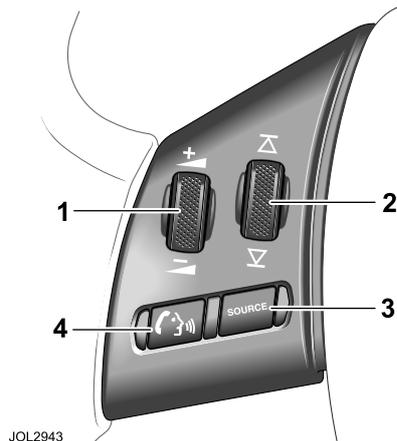


JOL2943

1. Increase/decrease volume.
2. Cycle through preset radio stations, next CD/MD track or tape automatic music search. Press and hold for 2 seconds to select next strong radio station, next CD or change tape side.
3. Cycle through radio FM, AM, cassette, CD, MD and CD changer. Press and hold for 2 seconds to select Phone Ready mode.
4. Start voice session, or mute if voice is not fitted. Answer phone call when ringing, or send/end in Phone mode.

For further information, see the audio systems handbook.

Rear Seat Back fold down (Estate only)

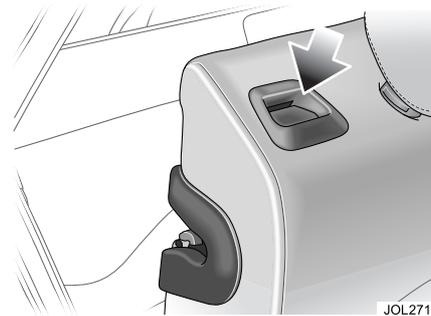

JOL2716

There is a red indicator to the rear of each release catch, which is only visible when the seat is unlatched.

When returning the seat back to the upright position, ensure the catches lock correctly: when locked, the red indicator on each catch is obscured.

Caution: If the catches are not locked correctly, the centre seat belt will not operate.

For further information, including instructions for folding rear seats in Saloon models, see page 72.

Filling Station Information

Fuel Type

Petrol models - Unleaded 95 RON.

Diesel models - Diesel fuel to EN 590 or equivalent.

Caution: DIESEL ENGINES - If you inadvertently fill your vehicle with petrol instead of diesel, do not attempt to start the engine. Contact your Jaguar Dealer/Authorised Repairer immediately.


Attempting to start the engine with petrol in the fuel tank will cause extensive damage to the engine and fuel system, which will not be covered by your Jaguar warranty.

Jaguar can accept no responsibility for any damage caused by running your vehicle with petrol in the fuel tank.

Diesel engines only: Drivers should expect above normal fuel consumption when the engine is new and 'bedding in'. After a period of time, the fuel consumption will gradually improve to expected levels.


Caution: Do not use RME (bio-diesel) except in the case of proprietary diesel fuels which contain a mix of up to 5%.

Fuel Filling

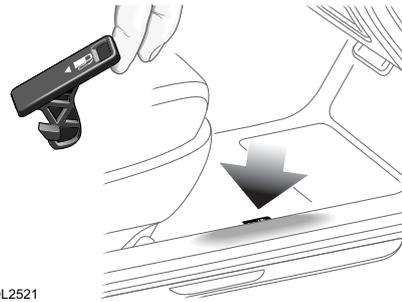

JOL2521

Pull the fuel filler flap release. This is located on the floor, outboard of the driver's seat, see page 126.

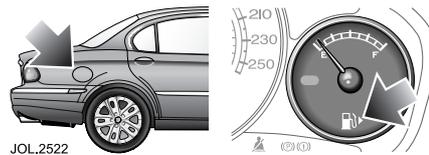

JOL.2522

The filler flap is located on the right-hand side of the vehicle.


Note: Vehicles with a diesel engine have a **yellow** filler cap.

For quickness and to completely fill the tank, ensure that the fuel nozzle rests on the bottom of the filler neck.

After refuelling, refit the filler cap in the filler neck and twist the cap clockwise until it clicks three times. Close the flap, which automatically locks shut.

Filling Station Information

Bonnet Release

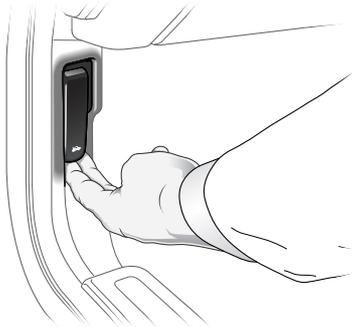

JOL2523

Pull the release lever located below the fascia on the left-hand side of the vehicle, see page 167.

Underbonnet Top-up

Recommended engine oil

See page 172.

Petrol models -

Castrol 5W-30 to Jaguar specification WSS M2C913 - A or B.

Diesel models -

An oil of 5W-30 to Jaguar specification WSS M2C913 - B must be used in all vehicles with a diesel engine.

For **top-up purposes only**, where oil of specification WSS-M2C-913-B cannot be found, ACEA B1 or ACEA B3 specification oils may be used.

Windscreen/headlight washer reservoir.

See page 174.

Cooling system

50% water/50% anti-freeze, see page 174.

Filling Station Information

Tyre Pressures

The tyre pressures for all normal operating conditions are shown on a label fixed to the end of the dashboard on the driver's side of the vehicle.

Check pressures when the tyres are cold (see page 181). Deflating air from a warm tyre to the recommended pressure will result in under inflation which may be dangerous.

For your convenience you may wish to record the tyre pressures in the boxes provided below. If you are unsure of the correct pressures, please contact your Jaguar Dealer/Authorised Repairer.

FRONT

Normal Driving

Laden/High Speed

Spare Wheel

REAR

Normal Driving

Laden/High Speed

Spare Wheel



WARNING:

When using tyres other than those recommended by Jaguar, do not exceed the speed capacity recommended by the manufacturer.