

# Touch-screen

---

## GENERAL INFORMATION

The touch-screen provides touch-control of vehicle climate, audio, navigation, television and telephone systems, as fitted. A small Liquid Crystal Display (LCD) screen below the touch-screen provides a digital display of the ambient temperature and vehicle cabin set temperature.

The touch-screen setup and user menus, clock setting, headlamp setting, door locking mode and power-fold door mirrors information is described within this section.

**Note:** *Remember to pass on the vehicle handbooks when reselling the vehicle. Handbooks are integral parts of the vehicle.*

The buttons surrounding the touch-screen display are referred to as 'hard buttons' and should be pressed not touched. The screen buttons are 'soft buttons' and only require to be touched to function.

Throughout this section, the expression 'Select an item' (or similar wording), means 'Touch the on-screen button adjacent to the item required'.

### Pop-up messages

The operation of certain functions will cause a small message to appear overlaying the touch-screen display. This 'pop-up' is for information only and will disappear automatically after a few seconds.

## SCREEN CLEANING

**Caution:** Care must be taken to avoid spilling or splashing drinks onto the touch-screen. In the event of such an occurrence advise your Jaguar Dealer/ Authorised Repairer.

Do not use any abrasive cleaners to clean your touch-screen. For approved screen cleaners, see your Jaguar Dealer/ Authorised Repairer.

## AUTOMATIC CLIMATE CONTROL

The climate control system can be controlled from the touch-screen buttons (accessed via the CLIMATE button to the left of the touch-screen) and is described in '*Touch-screen Climate Control*', page 156.

# Touch-screen

---

## AUDIO SYSTEMS

The vehicle audio system interacts with the JaguarVoice, Navigation, In-car Telephone and Climate Control systems via data on the multiplex communications vehicle network.

The audio system can be controlled from the radio front panel buttons, the touch-screen buttons accessed via the AUDIO button on the left of the touch-screen and from multi-function controls on the left-hand side of the steering wheel, where fitted. These controls are described in 'STEERING WHEEL CONTROLS', page 235.

The sound system antenna is an integral part of the vehicle rear screen and serves both FM and AM radio wavebands.

### Audio security code number

For the United Kingdom and European countries, the audio head unit is protected by an anti-theft security code. If power to the radio drops to 5 volts or less (dead battery), or there is a power interruption/disconnection, the touch-screen display will indicate **Enter System PIN**. At this point the radio will not operate until the correct security code is re-entered.

The four-digit code, which is listed on an audio security card supplied with the vehicle, is entered by pressing the appropriate numeric buttons **0** to **9** displayed on the touch-screen followed by the ENTER button.

If the code is entered incorrectly, two further attempts at code entry will be permitted. If, after three successive attempts, the code has not been properly entered, the display will indicate PLEASE WAIT. In this condition the radio will not accept further entries until it has been left on for at least 30 minutes. After 30 minutes the radio will accept three further entries

**Note:** *In the event of loss of your radio security card, contact your Jaguar Dealer who, for security reasons, will require proof of vehicle ownership.*

## IN-CAR TELEPHONE

The telephone function is described in 'SYSTEM OVERVIEW', page 257.

## JAGUARVOICE

JaguarVoice provides a safe and convenient way for the driver and/or rear occupants to control the following vehicle systems (where fitted):

- Sound system (radio, CD player and CD changer – as applicable).
- In-car telephone.
- Climate control system (front user only unless 4-zone climate control is fitted).
- Television and Teletext.
- Display screen (front user only).
- Navigation (front user only).

The system is controlled in the front of the vehicle by the steering wheel voice button.

# Touch-screen Display

---

## TOUCH-SCREEN DISPLAY



JOL4764

### TOUCH-SCREEN USE AND CARE

When the starter switch is initially turned to position I or II, the touch-screen will display the Jaguar logo screen followed by activation and display of the mode previously used. Display of buttons for other systems can be obtained by pressing the appropriate perimeter button. Functions of the MENU button are described on the following pages.



#### **WARNING:**

**In the interests of road safety, only operate, adjust or view the system when it is safe to do so.**


**Caution:** Care must be taken to avoid spilling or splashing drinks onto the screen. In the event of such an occurrence advise your Jaguar Dealer.

**Note:** When operating touch-screen buttons, always extend the tip of one finger, and withhold the thumb and remaining fingers from the screen. Touching the screen with more than one finger at a time may cause false inputs.

The touch-screen and inner bezel must be kept clean to maintain optimum performance. Finger marks and attracted dust should be regularly removed using a soft cloth and a Jaguar approved cleaning agent.

# Touch-screen Display

## MENU

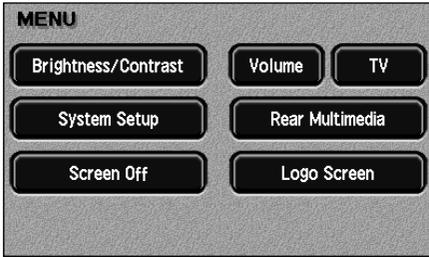


Pressing the **MENU** perimeter button will display the system menu screen.

The screen display can be blanked out by touching the **Screen Off** button.

Touch the screen, or press any of the perimeter buttons, to restore the display.

## VOLUME PRESET

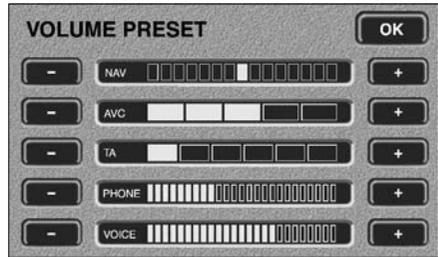

After touching the **Volume** button, the screen displays the buttons for adjustment of volume associated with the navigation system, JaguarVoice, telephone, Traffic Announcements (TA) and Automatic Volume Control (AVC). Adjustment of AVC varies the rate at which volume is increased or decreased relative to vehicle speed.

Touch or hold the + or – button to adjust the volume of the selected function.

**Note:** *If any of the volume slides are adjusted to the fully – position, then the volume is turned fully off.*

Confirm your selection by touching OK and the system menu screen will once again be displayed.

# Touch-screen Display

## BRIGHTNESS/CONTRAST



After touching the **Brightness/Contrast** button, the screen displays the buttons for adjustment of the screen display characteristics. The centre window shows the currently selected navigation view.

Touch the + or - button to adjust the selected function.

Screen brightness and contrast can also be dimmed for night driving. This is achieved either manually via the **Day**, **Night** or **Twilight** buttons (independent of the exterior lamp master switch position), or automatically via the **Auto** button (controlled by the exterior lamp master switch position).

Touch the **Default** button to restore the default settings.

Confirm your selection by touching **OK**.

## SYSTEM SETUP




After touching the **System Setup** button, the screen displays the buttons for selecting user settings or vehicle settings.

**Note:** Vehicles which have the JaguarVoice system fitted will have an additional button on the system setup screen for voice training.

# Touch-screen Display

## User settings

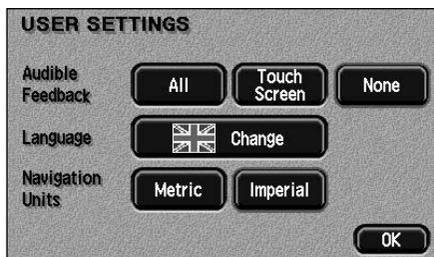

JOL1305Z

After touching the **User Settings** button, the screen displays the buttons for the selection of audible feedback, language, and units of measurement.


**All** selects audible feedback on the perimeter buttons and touch-screen buttons. **Touch Screen** selects audible feedback on the touch-screen buttons only. **None** selects no audible feedback.

To select another language, touch the **Change** button and, if the language is not shown, scroll the screen as required. To select a language, touch the flag of the country required.

**Navigation Units** provides either imperial or metric units for use with the navigation system.

Confirm your selection by touching **OK**.

## Vehicle settings

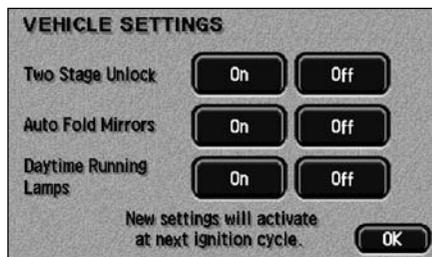

JOL253S

After touching the **Vehicle Settings** button, the screen displays the buttons that switch certain functions on or off.

### Two-stage unlock

If this function is switched on, the first press of the key transmitter 'unlock' button will only unlock the driver's door. Press the unlock button a second time to unlock the remaining doors.

If the function is switched off, pressing the unlock button once will unlock all of the doors.

### Power fold door mirrors

When this function is switched on, the door mirrors will automatically fold flat when global closing is performed (refer to '*LOCKING AND UNLOCKING*', page 47).

### Daytime running lamps

Where fitted, daytime running lamps will be activated. It is particularly useful when visiting countries where daytime running lamps are compulsory.