



BY APPOINTMENT TO  
HER MAJESTY QUEEN ELIZABETH II  
MANUFACTURERS OF DAIMLER AND JAGUAR CARS  
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO  
HER MAJESTY QUEEN ELIZABETH  
THE QUEEN MOTHER  
MANUFACTURERS OF DAIMLER AND JAGUAR CARS  
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO  
HIS ROYAL HIGHNESS THE PRINCE OF WALES  
MANUFACTURERS OF DAIMLER AND JAGUAR CARS  
JAGUAR CARS LIMITED COVENTRY

## Television Handbook

**JAGUAR CARS LIMITED**, as manufacturer, is dedicated to the design and production of vehicles which meet the expectations of the world's most discerning purchasers.

This handbook forms part of the owner literature supplied with your vehicle. It is designed to complement the relevant features and systems of the vehicle, and make them easy to understand and operate.

The information contained in this handbook applies to a range of vehicles and not to a specific vehicle. For the specification of a particular vehicle, owners should consult their Jaguar Dealer.

The manufacturer reserves the right to vary its specifications with or without notice, and at such times and in such manner as it thinks fit. Major as well as minor changes may be involved in accordance with the Manufacturer's policy of constant product improvement.

To cover changes, it is sometimes necessary to issue one or more handbook supplements. When reading this handbook, check the owner literature for possible supplements.

For full details of the owner literature originally supplied with the vehicle, owners should consult their Jaguar Dealer.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic, mechanical, photocopying, recording or other means without prior written permission from the Service Division of Jaguar Cars Limited.

# Contents

---

General Information . . . . .	1
Basic Controls. . . . .	2
Tuning . . . . .	6
To Set Country of Operation. . . . .	8
Change Screen Mode . . . . .	9
Teletext . . . . .	10
Telephone End Call Function . . . . .	12

A comprehensive index is located at the back of this Handbook.

## General Information

### Introduction

The TV tuner in the Switch and Display Unit provides TV viewing when the vehicle is stationary.

The TV picture is inhibited automatically when the vehicle speed exceeds approximately 3 mph (5 km/h).

With the TV function selected, but the picture inhibited, the TV sound continues to be available.

TV sound is provided through the audio system speakers.

**Note:** Television systems require consistent and strong signals for good quality reception. These signals are affected by transmitter coverage and surrounding features (hills, high buildings, trees etc.) which will reduce the signal, thus reducing picture quality.

Repositioning the vehicle may improve the picture whereas in difficult locations (distant transmitter, hills etc.) reception may not be possible at all. Sound quality may also be affected to a lesser degree by the above, which can give rise to variable quality over short distances while on the move.



### TV inhibit with vehicle moving

Should the vehicle speed exceed 3 mph (5 km/h) whilst the TV is on, the TV will be inhibited and returned to the TV MENU screen.

A warning indicator will appear across the screen for 3 seconds stating 'For your safety, the TV picture is not displayed while the vehicle is moving'.

### Overview of special features

1. Change screen mode:  
Three different screen modes are available, normal, wide 1 or wide 2.
2. Change country of operation:  
This feature allows the TV to be tuned to the channels available when driving in another country.  
**Note:** This is not applicable to Australia.
3. Full teletext functions:  
All normal functions of the teletext system are available, subject to local TV station transmissions.
4. Telephone end call function:  
A telephone call may be ended (whilst TV is on) by selecting an icon on the TV screen.

### Voice activation of TV

The TV system can be operated using the voice activation system (where fitted).

Please refer to the JaguarVoice Handbook.

## 2 Television

### Basic Controls

 


The following instructions assume that the appropriate country of operation has been selected (except for Australia) and the tuning presets have been set. Where this is not the case, refer to the relevant Section.

### Switching on the TV


Press the MENU button located on the right hand side of the Switch and Display Unit. The SYSTEM MENU will be displayed (shown above).

At the SYSTEM MENU, select TV to display the TV MENU screen.

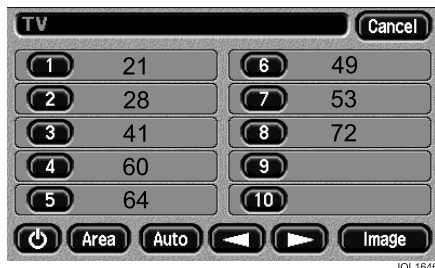

On the TV MENU screen select either, one of the presets (marked 1 to 10) or the IMAGE button.

 **Note:** If a preset has no channel number shown, then it cannot be selected to display a TV picture.

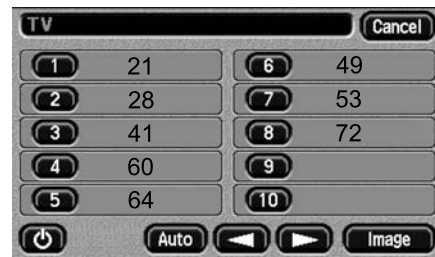

### TV Menu screen for Australia

The TV MENU screen for Australian markets is identical in appearance and function except that there is no AREA selection button. The whole of Australia has the same television transmission frequency.

## Basic Controls (continued)



JOL.1199

The TV picture will be displayed.  
TV screen shown in Wide Mode 1.


### To Switch off the TV and return to SYSTEM MENU screen

Touching the TV screen at any time will return to the TV SET-UP display.



JOL.1188

 On the TV SET-UP display, touch the TV MENU icon to show the TV MENU screen.

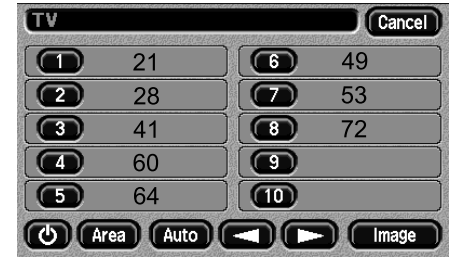

JOL.1646

To return to the SYSTEM MENU screen, select CANCEL at the top right hand corner of the TV MENU screen.

## 4 Television

 
---

### Basic Controls (continued)

#### To switch off the TV and set all systems to be dormant

Touch the TV screen to revert to the TV SET-UP display.

On the TV SET-UP display, touch the TV MENU icon to show the menu screen.

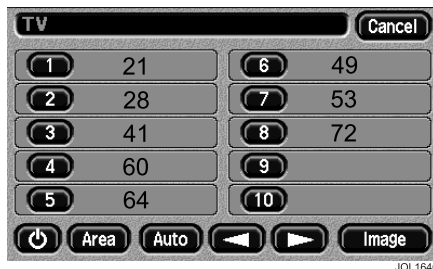

Touch the ON/OFF button at the bottom left of the TV MENU screen.

The screen will go off, the TV sound will go off and either, the previously selected audio system will play or, the system will remain quiet if previously no audio system had been selected.

#### Selecting a preset channel

To change to another preset channel while viewing the TV, touch the TV screen to return to the TV SET-UP display.

Select the TV MENU icon to show the TV MENU screen.

On the TV MENU screen, select the desired channel preset, marked 1 to 10.

The selected TV channel will be displayed.

#### Setting the volume

The TV volume is controlled from the vehicle audio system.


## Basic Controls (continued)

### Adjusting contrast, brightness or colour

To adjust the TV contrast, brightness or colour, touch the TV screen to return to the TV SET-UP display.

Touch the TV ADJUST icon to show the adjustment screen. This screen is displayed in WIDE 1 mode.

 After approximately 8 seconds, if no icon has been selected, the TV ADJUST screen will change to the normal TV screen.

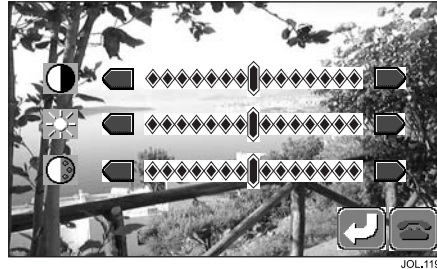

Touch the adjustment slider icon, adjacent to the required symbol, contrast, brightness or colour, at either end of the slider to adjust for more or less.

When adjustments are complete, touch the RETURN icon to return to the TV screen.

### Icons used in Basic Controls

Use of the following icons has been described in this section:



Selects the TV MENU screen.



Selects the TV ADJUST display.



Selects contrast adjustment.



Selects brightness adjustment.



Selects colour adjustment.



Returns to TV screen.

## 6 Television

### Tuning

The following instructions describe the various methods available for tuning the TV.

Not every screen view which is mentioned in this Tuning section is shown. If necessary, refer to the Basic Controls section for those screen views which are not shown.

Icons which are used in this section are listed at the end of this section.

 
The touch screen system audible feedback must be set to ON in order to provide the double beep when tuning. If necessary, this can be set as follows:

1. Press the MENU button located on the right hand side of the Switch and Display Unit. The SYSTEM MENU will be displayed. See **Switching on the TV** on page 2.
2. Select SYSTEM SETUP, USER SETTINGS and set Audible Feedback to either All or Touch Screen. Refer to Section 1 of the Driver's Handbook.

#### Setting channel presets using the auto function

Touch the TV screen to return to the TV SET-UP display.

Select the TV MENU screen.

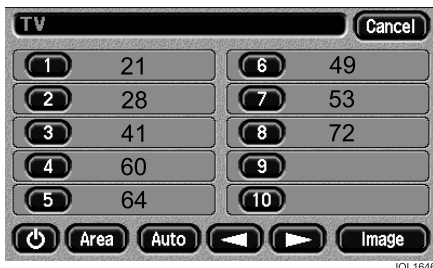

On the TV MENU screen, touch and hold the AUTO button for between 2 to 3 seconds until a double beep sounds.

The AUTO button and the TUNE/SEEK buttons will become disabled, and the channel number indicator at the top of the screen will start to increase.

The ten strongest channels (if ten are available) will be stored on the channel selection preset buttons (1 to 10) in the order, strongest channel on preset 1 to the weakest on preset 10.

When finished, the AUTO and TUNE/SEEK buttons will be enabled and preset 1 will be selected automatically.

#### Setting channel presets manually

Channels may be manually scanned from either the TV MENU screen or the TV SET-UP display.



Touch and hold the appropriate TUNE/SEEK icon (Left or Right facing arrow) for between 2 to 3 seconds until a double beep sounds.

The icon will be disabled whilst seeking a channel and audio output will be muted.

When a channel is found and the seek procedure stops, TV sound will be heard and the channel number at the top of the screen will be static.

Either, repeat the seek procedure until the desired channel has been found or store the channel in a preset.

**Using the TV MENU screen for tuning.** The TV picture is not visible.

This new channel can now be stored in any preset by touching and holding the preset until a double beep is sounded.



## Tuning (continued)

To view the new channel before storing it in a preset, touch the IMAGE button to display the TV screen.

If storing the channel, touch the TV screen to return to the TV SET-UP display. Touch the TV MENU icon. At the TV menu screen, store the channel in any preset by touching and holding the preset until a double beep is sounded.

### Using the TV SET-UP display for tuning.

The TV SET-UP display may have defaulted to the normal TV screen. If storing the channel, touch the TV screen to return to the TV SET-UP display.

Touch the TV MENU icon. At the TV menu screen, store the channel in any preset by touching and holding the preset until a double beep is sounded.

### Changing a preset to a different stored channel

As an example, if the channel on preset 8 needed to be copied to preset 5:

On the TV MENU screen, select preset 8.

Whilst the channel on preset 8 is active (TV picture and sound is on) touch the screen to show the TV SET-UP display, then select the TV MENU icon. On the TV MENU screen, touch and hold preset 5 until a double beep is sounded.

The channel that was previously on preset 8 is now on preset 5 and still on preset 8. The channel that was on preset 5 is lost.

### Manual tuning

Touch the TV screen to show the TV SET-UP display. The TV MENU screen can also be used, but the TV picture is not available.

Touch the appropriate TUNE/SEEK icon (Tune up/Seek up or Tune down/Seek down) for approximately 1 second. Each time one of the icons is touched, the channel number increases or decreases by one.

Repeat the procedure until the desired channel has been found. The new channel may be viewed at this point and lost when the TV is switched off, or stored in a preset for future selection.

### Icons used in Tuning

Use of the following icons has been described in this section:



Selects the TV MENU screen.



Tune up/Seek up. Touch and release increases channel number by one. Touch and hold for between 2 to 3 seconds, seeks the next strongest channel and stops.



Tune down/Seek down. Touch and release decreases channel number by one. Touch and hold for between 2 to 3 seconds, seeks the next strongest channel and stops.

## 8 Television

### To Set Country of Operation

**Note:** This section is not applicable to Australia.

Not every screen view which is mentioned in this section is shown.

If necessary, refer to the Basic Controls section for those screen views which are not shown.

The TV can easily be set to operate in a number of European countries.

To set or change the country of operation, display the TV MENU screen:

- From the SYSTEM MENU screen of the Switch and Display Unit, select TV to display the TV MENU screen, or;
- From the TV SET-UP display, select TV MENU.

Select AREA to display the Country Selection Screen.



If AREA is selected, a map is displayed which shows the country that is currently selected along with the national flag of that country. The corresponding selection button is also highlighted.

Choosing a different selection button for another country, will place the flag of that country on the screen, shade in the new country on the map and highlight the selected button.

To accept the new setting, select OK.

To reject the new setting, select CANCEL.



If the new setting is accepted, a warning message will be displayed to indicate that the selection of a different area will erase the current preset channels. The final choice to accept or reject the new setting is offered.

Choosing YES returns to the TV MENU with the new area selected, but with no preset channels; selecting NO returns to the Country Selection Screen.

## Change Screen Mode

Not every screen view which is mentioned in this section is shown. If necessary, refer to the Basic Controls section for those screen views which are not shown.

Icons which are used in this section are listed at the end of this section.

There are three different display modes for the television, Normal, Wide 1 and Wide 2.

**Normal Mode** – standard television 4:3 format. A black strip is displayed to each side of the picture.

**Wide 1 Mode** – increases the viewing area of Normal Mode to the full size of the screen.

**Wide 2 Mode** – TV picture is displayed in 4:3 format, but to fit the screen horizontally. Used to display pictures broadcast in Wide Screen format.

Touch the TV screen to return to the TV SET-UP display. Touch the MODE icon (icon with two TV screens) to show the MODE CHANGE screen.



JOL.1201


Only two screen icons will ever be displayed (not three as shown above, which is for explanation only) on this MODE CHANGE screen because the currently selected mode can not be selected.

Touch the appropriate icon for the desired display mode and touch the RETURN icon to return to the TV.

If no action is taken on the screen, a return to TV in the original mode will occur after approximately 8 seconds.

### Icons used in change screen mode


Use of the following icons has been described in this section:

 Selects the TV MODE CHANGE screen. This icon is on the TV SET-UP display.

 Selects NORMAL 4:3 mode.

 
 
 Selects WIDE 1 mode.

 Selects WIDE 2 mode.

 Returns to TV screen.

# 10 Television

## Teletext

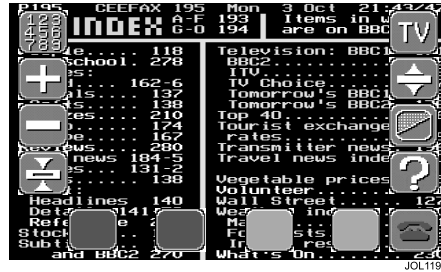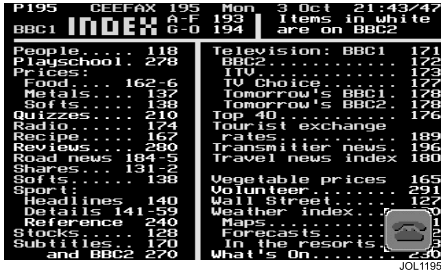

Not every screen view which is mentioned in this section is shown. If necessary, refer to the Basic Controls section for those screen views which are not shown.

Icons which are used in this section are listed at the end of this section.

### Select teletext

With the desired TV channel selected, touch the screen to select the TV SET-UP display.

Select the TELETEXT icon.

The normal teletext screen (Text Screen 1) shown above will be displayed.

Each text screen is displayed in Wide 1 mode.

Touch the normal teletext screen (Text Screen 1) to display a second text screen (Text Screen 2) shown above, containing icons.

If an icon is not selected within 8 seconds, the screen will revert to the normal teletext page (Text Screen 1).

### Selecting a teletext page

On Text Screen 2 shown above, select the numeric keypad icon, which is at the top left hand corner of the screen.

With the numeric keypad displayed, select the desired 3 digit teletext page number. The page will be selected and displayed in Text Screen 1.

If a key is not touched within 3 seconds, the screen reverts to the previous screen (Text Screen 2). Or, touch the screen anywhere except the keypad, to return to Text Screen 2.

### Return to TV

Touch Text Screen 1, the default text screen, to display Text Screen 2.

Touch the TV icon.

## Teletext (continued)

### Icons used in teletext mode

Use of the following icons has been described in this section:



Select teletext. This icon is on the TV SET-UP display.



Increments the page number.



Decrements the page number.



Hold the page displayed or release the currently held page.



Display hidden text e.g. answers to a quiz.



Choose the Numeric Keypad. Used to input the desired text page.



Mix TV and Text. Each touch of the icon steps through the sequence, Teletext, TV, Mixed (TV and Teletext superimposed), Teletext.



Large Text. Each touch of the icon steps through the sequence, Normal size, Upper half of the screen expanded, Lower half of the screen expanded, Normal size.



Fast Text. there are four fast text icons, red, green, yellow and blue. Each colour of icon corresponds to the same coloured link displayed at the bottom of the displayed page.



Return to TV.

## 12 Television

---

### Telephone End Call Function

A telephone icon is displayed whenever a telephone call is in progress.

The icon is displayed during an incoming call and during an outgoing call, whether dialled manually or by using the voice activation system.

The telephone call may be ended by touching the icon (or by voice activation).



Telephone call is in progress.  
Call may be ended by touching this icon.

Basic Controls . . . . .	2	Tuning . . . . .	6
– Adjusting contrast, brightness or colour . . . . .	5	– Changing a preset to a different stored channel . . . . .	7
– Icons used in Basic Controls . . . . .	5	– Icons used in Tuning . . . . .	7
– Selecting a preset channel . . . . .	4	– Manual tuning . . . . .	7
– Setting the volume . . . . .	4	– Setting channel presets manually . . . . .	6
– Switch off the TV and return to System Menu screen . . . . .	3	– Setting channel presets using the auto function . . . . .	6
– Switch off the TV and set all systems to be dormant . . . . .	4		
– Switching on the TV . . . . .	2		
– TV Menu screen for Australia . . . . .	2		
Change Screen Mode . . . . .	9		
– Icons used in change screen mode . . . . .	9		
General Information . . . . .	1		
– Introduction . . . . .	1		
– Overview of special features . . . . .	1		
– TV inhibit with vehicle moving . . . . .	1		
– Voice activation of TV . . . . .	1		
Telephone End Call Function . . . . .	12		
Teletext . . . . .	10		
– Icons used in teletext mode . . . . .	11		
– Return to TV . . . . .	10		
– Select teletext . . . . .	10		
– Selecting a teletext page . . . . .	10		
To Set Country of Operation . . . . .	8		

**JJM 10 13 24/22**